#### **DOCUMENTATION**

chamsyslighting.com/genetix-docs



### CUSTOMER SUPPORT

support@chamsys.co.uk

#### WARRANTY

chamsyslighting.com/pages/warranty



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

This device may not cause harmful interference; and

This device must accept any interference received, including interference that may cause undesired operation. For more information: https://www.chamsyslighting.com/pages/fcc-notice

ChamSys products must be disposed of in accordance with the WEEE disposal and recycling regulations (http://ec.europa.eu/environment/waste/weee/index\_en.htm)

WEEE Producer registration number WEE/FF5605UX.









### GeNetix



## 1 POWER

#### POWER VIA USB-C

Connect the USB-C cable from the GeNetix GN2 into the USB-A port on your PC or ChamSys console.

#### POWER VIA POE

Connect an Ethernet cable from the power over Ethernet source into the rear network port labelled "PoE IN".



#### NOTE

Host data can only be received over the USB-C connection **or** the network connection. A combination of the two can not be performed to receive data.

# 2 UPDATE

#### FIRMWARE VERSION

This product might be using out of date firmware. Check the latest released version via the online GeNetix documentation.



GeNetix Docs

#### INSTALL

Firmware updates can be installed via the MagicQ & QuickQ software packages. Download the latest versions below.







**QuickQ** Download